

SEIT



1851

FEURICH OLYA^{evo}



E-PIANO



ASSEMBLY AND OPERATING INSTRUCTIONS

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS




Assembly video

The easiest way to assemble your OLYA is to visit us at www.feurich.com/en/olya, and watch our assembly video.





NOTE: assembling your OLYA is quick and easy. Because some of the parts are quite big, we recommend getting another person to help.

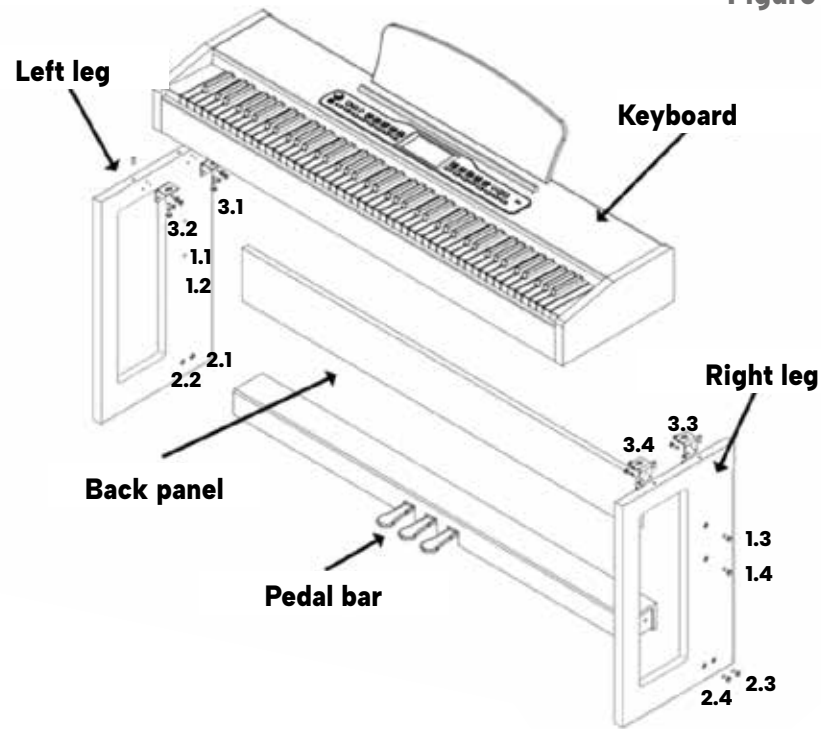 Figure A




 Wood screws M5X50 (4x)
 for steps 1.1, 1.2, 1.3, 1.4


 Metal screws M6X50 (4x)
 for steps 2.1, 2.2, 2.3, 2.4


 Hand screws M6X20 (6x)
 for steps 3.1, 3.2, 3.3, 3.4

1. Remove all the parts from the packaging and lay them out. In the cavity in the pedal bar, you will find a little bag containing all the connecting elements, a screwdriver, the power cable and the operating instructions.
2. Use two metal screws (M6X50) to connect a leg to the pedal bar. The open side of the leg should face forwards and the black brackets upwards, so that you can fix the keyboard to them later. Begin by pushing two metal screws through the two recesses that are at the bottom of the outside of the leg, then tighten those screws to secure the leg to the pedal bar (see 2.3 and 2.4 in Figure A).

3. Undo the power cable which is in the cavity in the pedal bar and thread it out through the opening at the back right. (Point 12 explains how to connect the cable to the bottom of the keyboard.)

4. Use two wood screws (M5X50) to attach the back panel to the same leg to which you just attached the pedal bar. The procedure for this is the same as for Point 2: start by pushing the wood screws through the two recesses in the middle of the outside of the leg, then tighten those screws to secure the back panel (see 1.3 and 1.4 in Figure A).



5. Now lay the outside of the leg flat on the floor so that the pedal bar and back panel point upwards.

6. Repeat the steps in Points 2 and 4 to connect the second leg to the pedal bar and back panel (see 1.1, 1.2, 2.1, 2.2 in Figure A).

7. Now place the assembled wooden frame back on the floor with the pedal bar at the bottom and use the eight covers provided to cover the openings on the outside of the legs where you inserted the screws in the previous steps.

ASSEMBLY INSTRUCTIONS

8. You're almost finished. Using the screwdriver, press in the four recesses on the underside of the keyboard.
9. Position the keyboard so that the wooden pegs on top of the legs fit into the holes in its underside.
10. Secure the keyboard to the metal brackets on the wooden frame using four hand screws (M6X20). Don't overtighten them, otherwise it will be difficult to undo them again later (see 3.1 to 3.4 in Figure A).
11. Using the screwdriver, press in the two recesses above the control element on the top of the keyboard as you did in Point 8, then position the music stand on the keyboard before fixing it in place using two hand screws (M6X20).
12. Take the DIN connector from the cable that you pulled out of the cavity in the pedal bar in Point 3 and connect it to the DIN socket located to the right on the bottom of the keyboard (see figure below).



NOTE: important! DO NOT connect the cable from the pedal bar to the MIDI socket on the back of the piano.

13. Connect the power supply unit to the back of the piano and insert its plug into a 220 V socket (see figure below).



NOTE: only disconnect the power cable if you want to transport the keyboard. And in this case, unplug the power cable from the socket before removing the plug at the back of the piano.

 
14. To switch on the piano, press the „ON/OFF“ switch and turn up the volume using the large round knob just above the switch.



SIMPLIFIED OPERATING INSTRUCTIONS



SIMPLIFIED OPERATING INSTRUCTIONS

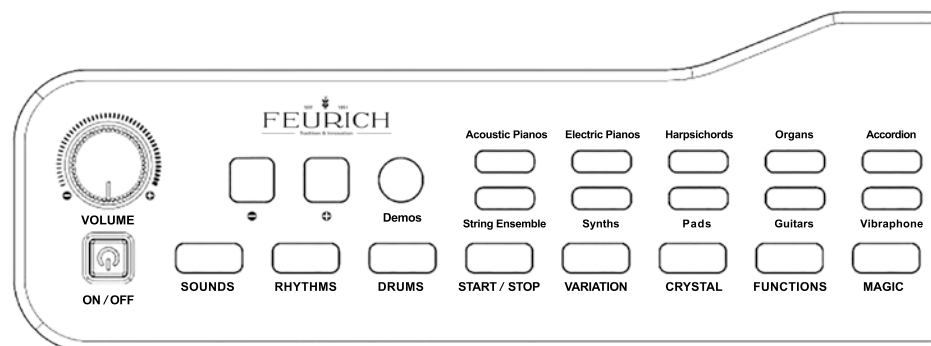

How do you choose a sound?

You can choose from 20 selected sounds using the control panel. **EXAMPLE:** press **Accordion** to play with a Cavagnolo accordion sound. Press it again to select another accordion sound.

When you switch the piano on, the default sound is acoustic piano. You can return to that setting at any time by pressing the **„EXIT“** button (on the right side of the control panel) without having to switch the piano off.

How do I switch on the drum machine?

Press **„START/STOP“**, tap **„RHYTHMS“**, then press **„+“** and **„-“** to scroll through 100 different rhythms.

How do I play with full orchestration?

 
Press **„START/STOP“** to start the drum machine, then press **„ARR ON/OFF“** (accompaniment **on/off**). Use the **„ARR MODE“** (accompaniment mode) button to choose whether you prefer to form chords using one finger or at least three fingers.

How can I layer 2 sounds?

Select a sound, press **„DUAL“**, then select another sound.

How can I see which note I'm playing?

When you play a note on the piano, it appears on the keyboard on the LCD in the middle of the control panel. When looking at the display from your piano stool, lean forward a little to get a better view of the screen.

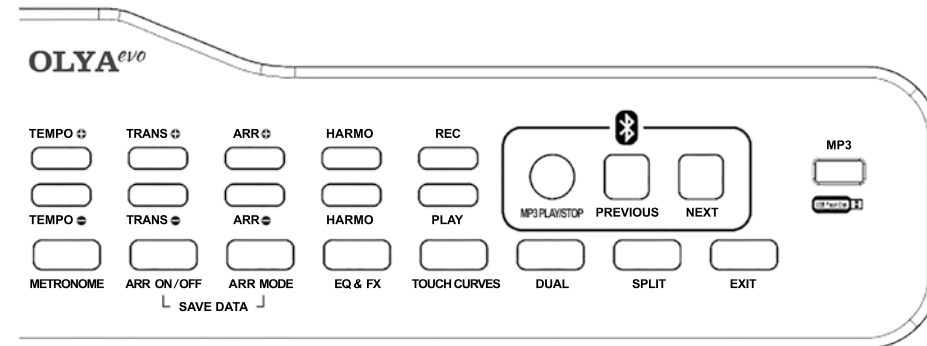

How do I switch on Bluetooth?

Press **„MP3 PLAY/STOP“** for one second. You can now pair your phone with the piano and use the OLYA as a Bluetooth speaker.

Can I connect Bluetooth headphones?

No, you can't connect Bluetooth headphones, because Bluetooth can be subject to delays which would cause latency when you play the piano. But you can connect your headphones using the 6.35 mm jack socket under the piano to the left (two sockets available), or on the back.

Can I connect a USB memory stick to play MP3s?

Yes, you just have to activate the interface first by pressing **„MP3 PLAY/STOP“** for one second and then insert the memory stick.

NOTE: your MP3 files must be saved in the memory stick's root folder. Don't save them in other folders or subfolders, otherwise the piano won't read them.

GUARANTEED UPGRADE



What is the upgrade guarantee and how can I claim it?

As the owner of a FEURICH OLYA electric piano, you can claim your guaranteed upgrade to an acoustic FEURICH piano within two years of purchasing. If you do, we will credit you the full purchase price of your FEURICH OLYA. Go to www.feurich.com/en/olya/upgrade and send us your receipt. We will then send you a custom offer for **the FEURICH piano of your choice**, including delivery and subsequent tuning.

HERE'S THE LINK TO YOUR UPGRADE FORM



www.feurich.com/en/olya/upgrade



CERTIFICATE OF EXCHANGE

1.

Go to www.feurich.com/en/olya/upgrade, complete the form, send us your receipt and select the FEURICH acoustic piano of your choice.

2.

We will send you a custom offer for the FEURICH piano of your choice, including delivery and subsequent tuning by a FEURICH supplier near you.

(This will include credit for the full purchase price of your FEURICH OLYA electric piano.)

3.

When we deliver your new FEURICH acoustic piano, we'll simply take the FEURICH OLYA electric piano away with us.

Regards,
your FEURICH-Team



**FREE
PIANO
COURSES**

*How do I access the
free piano courses?*

All you have to do is register at
www.feurich.com/en/olya/pianocourses
to receive free, unlimited access to our piano
courses. You'll also be notified by email
whenever a new course becomes available.

*Want to get in touch?
We look forward to hearing from you:*

SEIT  1851
FEURICH
— Tradition & Innovation —

E-Mail: olya@feurich.com

OUR HOTLINE:
+43 1 523 37 88 99



SEIT  1851

FEURICH

Tradition & Innovation

FEURICH PIANOFORTE GmbH
Kaiserstraße 10, 1070 Vienna, Austria